

Ken Godwin (Sales)

Maritime House

1 Maritime Close

Medway City Estate

Rochester

Kent

ME2 4DJ

sales@ken-godwin.com

www.ken-godwin.com

Tel: 01634 720204



Fax: 01634 720205

Fitting instructions

PA0031

Installation Notes:

1. Glass surface should be clean and free from dust particles - use an alcohol swipe
2. Glass should be at room temperature - otherwise film adhesive can appear cloudy
3. Glass should be between 4-6mm thick. Thicker glass may require the antenna to be returned
4. We recommend that you use a VSWR meter to ensure that the film antenna is correctly in tune (VHF films only). In the case of the Untuned SL Film Antenna, temporarily adhere the film to the windscreen, fibreglass or plastic, check the VSWR, snip both ends of the film with scissors in 1cm units until a satisfactory VSWR is achieved - at that point adhere the film
5. Ensure that the top film protecting the antenna contact points is removed
6. Ensure that the backing film is removed using the pull tabs
7. Avoid getting fingerprints on the film adhesive
8. If placing on the rear windscreen, avoid placing the film across the demister elements. If in doubt, place the film antenna, without adhering it, in the required position and test the tuning with the VSWR meter
9. When adhering the film to the glass, make sure that no air bubbles are present
10. Make sure that you have enough room to adhere the connector
11. Peel backing tape from the connector using the pull tabs
12. Line up the connector terminal points with the points on the film
13. Apply pressure for 20-30 seconds noting that the adhesive cures over a period of 5-10 minutes

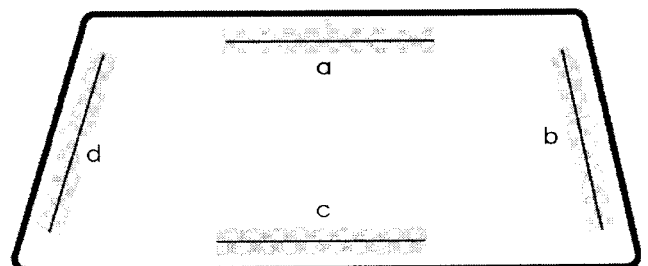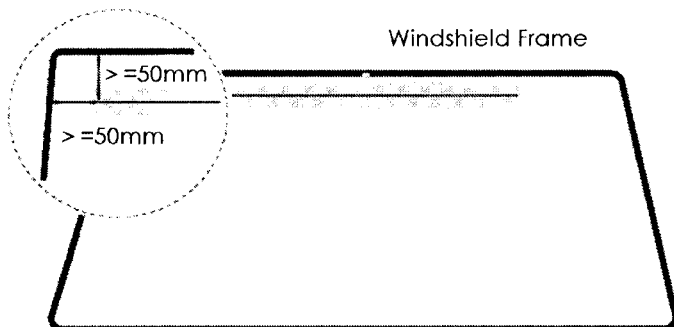

Optimum installation Positions
are a,b,and d